

TL-RA10

3000K 4000K 6500K

>30.000
Hours

220-240
VAC

RoHS

CE

 


| Model | Power | Led source | Beam angle | CRI | CCT | Flux |
|---------|-------|----------------|------------|-----|-------|--------|
| TL-RA10 | 10W | Bridgelux(USA) | 120° | >80 | 3000K | 920lm |
| | | | | | 4000K | 1055lm |
| | | | | | 6500K | 1055lm |


LAMP PHOTOMETRIC REPORT

AVERAGE AND CENTER E Figure

ISOLUX DIAGRAM

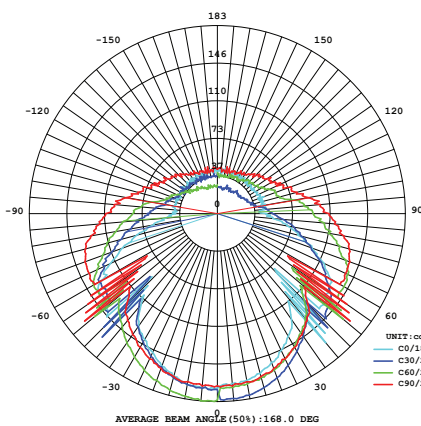


| Height | AVR E | CENTER E | Diameter |
|--------|---------|----------|-----------|
| 1.50m | 21.61lx | 75.47lx | 502.25cm |
| 2.00m | 12.15lx | 42.45lx | 669.66cm |
| 4.00m | 3.04lx | 10.61lx | 1339.32cm |
| 6.00m | 1.35lx | 4.72lx | 2008.98cm |
| 10.00m | 0.49lx | 1.70lx | 3348.30cm |

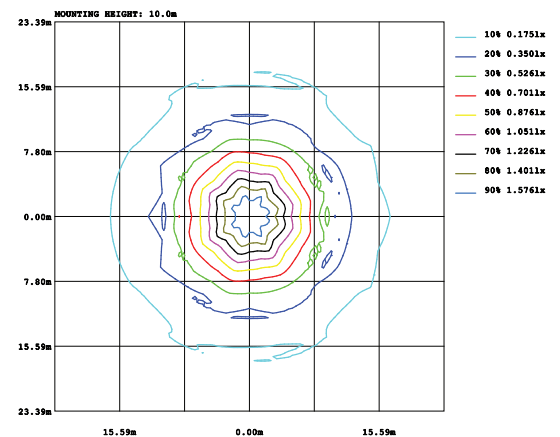 

Parameter of TL-RA10 | CCT 4000K

 
PACKING

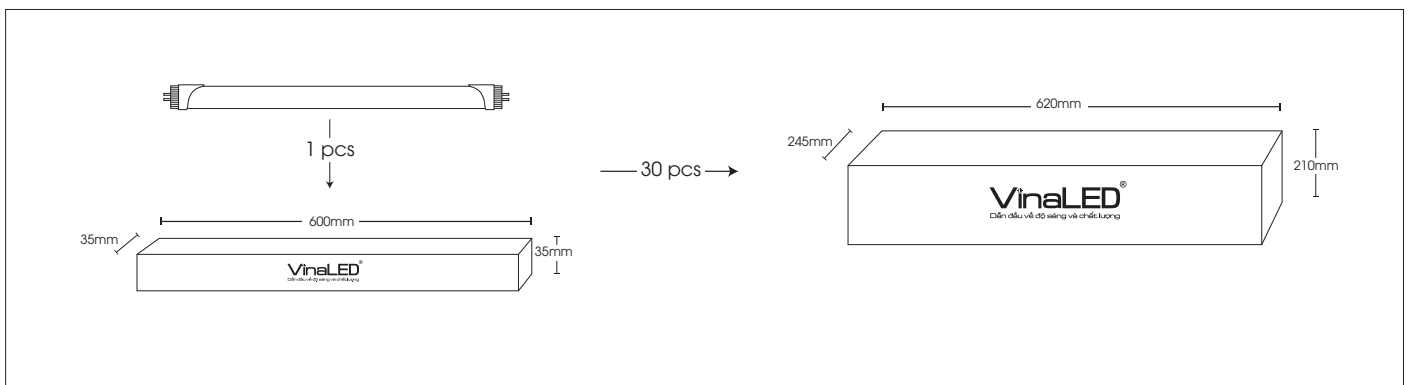

INSTALLATION INSTRUCTIONS


RE-USE THE OLD TROUGH (ELECTRONIC TRANSFORMER)

 1. Cut off the tranformer and mouse
2. Reassemble the wires, using the technical tape wrapped in the connection position
3. Install the lamp in the trough, turn the angle of lighting to match (note: the head of foot pin on both ends of the lamp is the same)

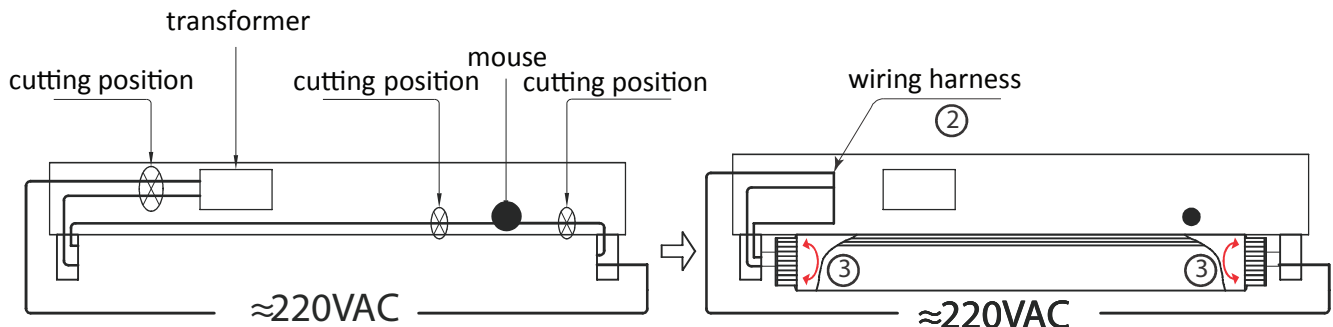


RE-USE THE OLD TROUGH (ELECTROMAGNETIC TRANSFORMER)

 1. Cut off the transformer and mouse
2. Reassemble the wires, using the technical tape wrapped in the connection position
3. Install the lamp in the trough, turn the angle of lighting to match (note: the head of foot pin on both ends of the lamp is the same)

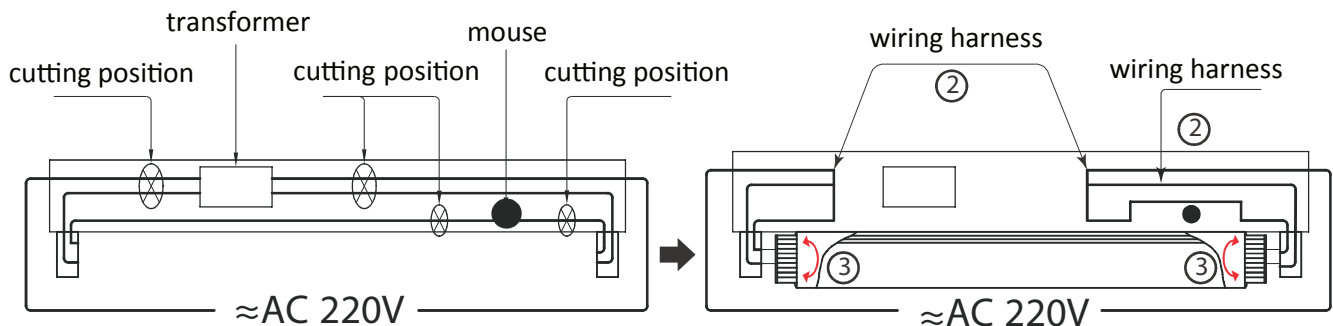

USING NEW TROUGH

 Install the lamp in the trough, turn the angle of lighting to match (note: the head of foot pin on both ends of the lamp is the same)

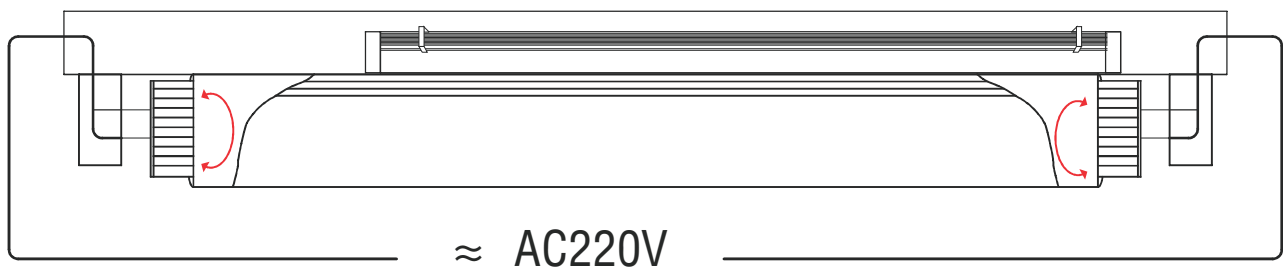

Note: Turn off the power, check the entire power system before installation.
All heat sinks do not come in direct contact with steel or iron