 


TL-C22S

3000K 4000K 5000K 6500K



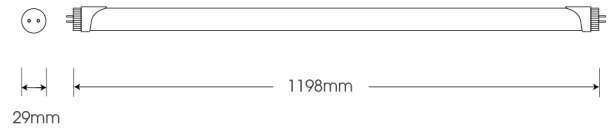


| Model | Power | Led source | Beam angle | CRI | CCT | Flux |
|---------|-------|------------|------------|-----|-------|--------|
| TL-C22S | 22W | Samsung | 120° | >80 | 3000K | 2180lm |
| | | | | | 4000K | 2380lm |
| | | | | | 5000K | 2380lm |
| | | | | | 6500K | |

LAMP PHOTOMETRIC REPORT


AVERAGE AND CENTER E Figure

   ISOLUX DIAGRAM

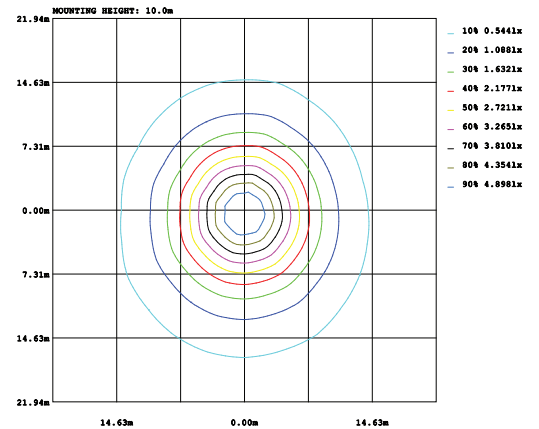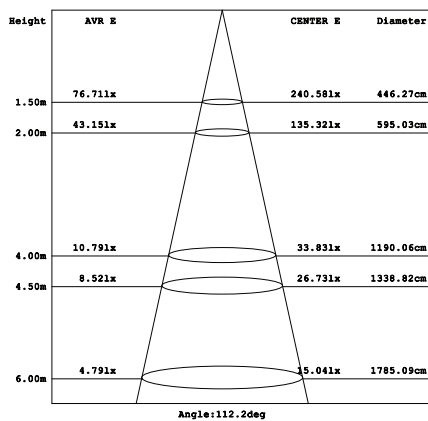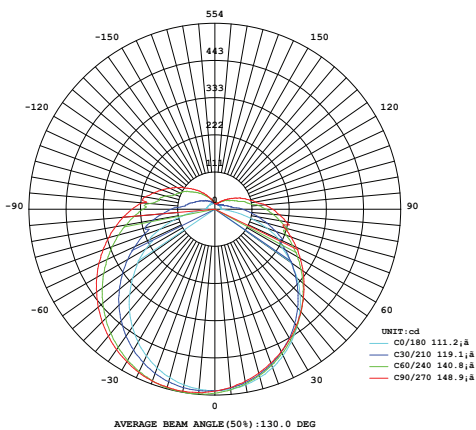

Parameter of TL-C22S | CCT 4000K

 PACKING

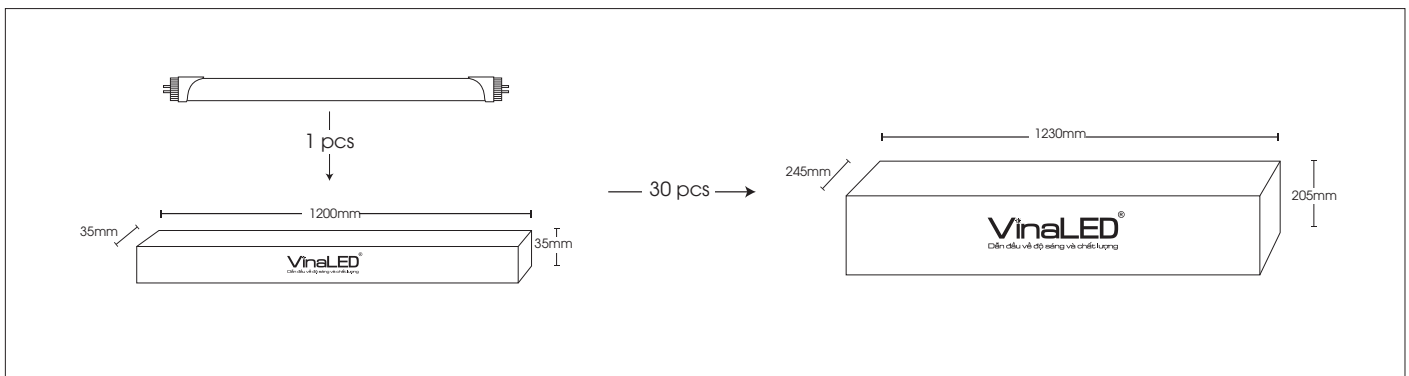


INSTALLATION INSTRUCTIONS

RE-USE THE OLD TROUGH (ELECTRONIC TRANSFORMER)

1. Cut off the tranformer and mouse
2. Reassemble the wires, using the technical tape wrapped in the connection position

 
3. Install the lamp in the trough, turn the angle of lighting to match (note: the head of foot pin on both ends of the lamp is the same)

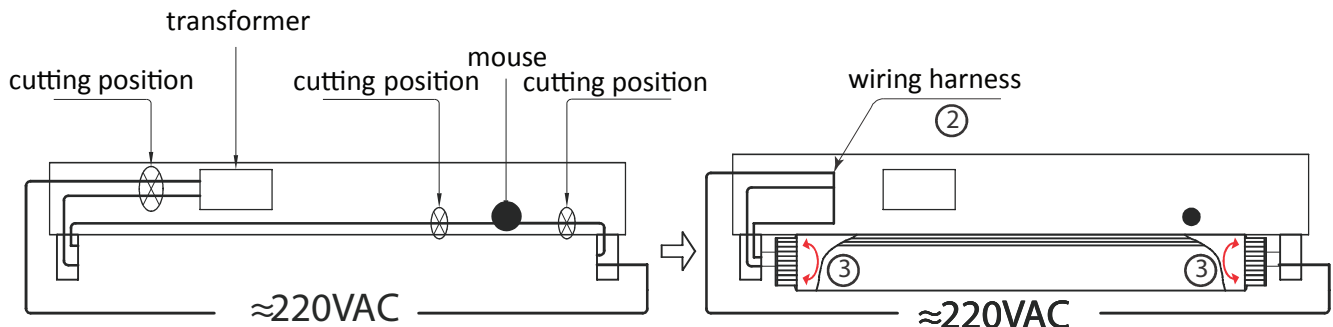

RE-USE THE OLD TROUGH (ELECTROMAGNETIC TRANSFORMER)


1. Cut off the transformer and mouse
2. Reassemble the wires, using the technical tape wrapped in the connection position

 3. Install the lamp in the trough, turn the angle of lighting to match (note: the head of foot pin on both ends of the lamp is the same)

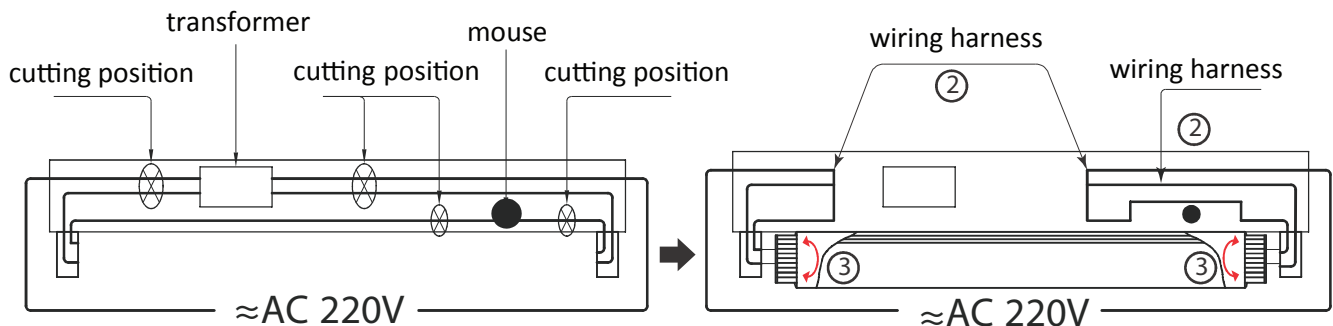

USING NEW TROUGH

 Install the lamp in the trough, turn the angle of lighting to match (note: the head of foot pin on both ends of the lamp is the same)

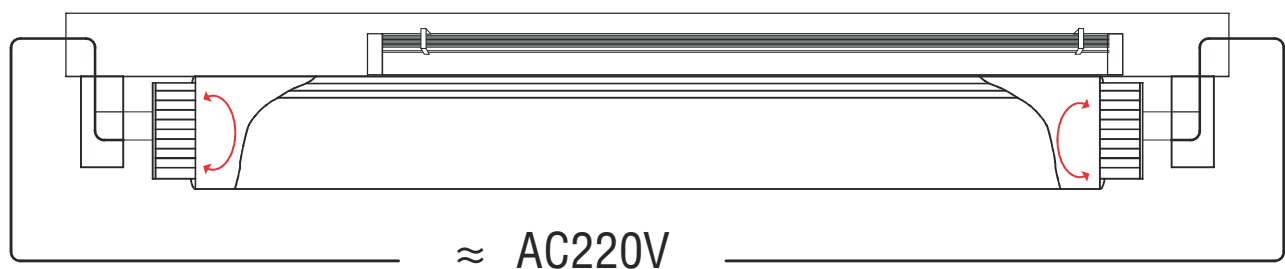

Note: Turn off the power, check the entire power system before installation.
All heat sinks do not come in direct contact with steel or iron